



Recommended parts for Slow-steam [VJP burner]

<p>1. Burner head part</p> <hr/> <p>a. Burner head assy</p> <hr/> <p style="padding-left: 20px;">(include below seven items)</p> <hr/> <p style="padding-left: 40px;">Stabilizer</p> <hr/> <p style="padding-left: 40px;">Cap nut</p> <hr/> <p style="padding-left: 40px;">Atomizer</p> <hr/> <p style="padding-left: 40px;">Atomizer block</p> <hr/> <p style="padding-left: 40px;">Pilot burner</p> <hr/> <p style="padding-left: 40px;">Pilot atomizer</p> <hr/> <p style="padding-left: 40px;">Ignition electrode</p> <hr/> <p>b. Metal throat</p> <hr/>	<p>5. Piping part</p> <hr/> <p>a. F.O. inlet magnetic valve</p> <hr/> <p>b. Pressure switch</p> <hr/> <p>c. Oil relief valve</p> <hr/> <p>d. Pressure gauge</p> <hr/>
<p>2. Flame-eye part</p> <hr/> <p>a. Flame-eye</p> <hr/> <p>b. Flame detector relay</p> <hr/>	<p>6. Oil heater part</p> <hr/> <p>a. Heater element assy</p> <hr/> <p style="padding-left: 20px;">(include below four items)</p> <hr/> <p style="padding-left: 40px;">Heater element</p> <hr/> <p style="padding-left: 40px;">Thermostat</p> <hr/> <p style="padding-left: 40px;">Burner terminal box</p> <hr/> <p style="padding-left: 40px;">Heater flange packing</p> <hr/> <p>b. Thermometer</p> <hr/>
<p>3. F.O. pump part</p> <hr/> <p>a. F.O. pump</p> <hr/> <p>b. Coupling</p> <hr/> <p>c. Motor for F.O. pump</p> <hr/> <p>d. Ball bearing for above motor</p> <hr/> <p>e. Pressure gauge</p> <hr/> <p>f. Compound gauge</p> <hr/>	<p>7. Air inlet part</p> <hr/> <p>a. Air damper solenoid</p> <hr/> <p>b. Motor for F.D. fan</p> <hr/> <p>c. Bearing for above motor</p> <hr/>
<p>4. D.O. (Pilot) pump part</p> <hr/> <p>a. D.O. pump</p> <hr/> <p>b. Coupling</p> <hr/> <p>c. Motor for D.O. pump</p> <hr/> <p>d. Ball bearing for above motor</p> <hr/> <p>e. Pressure gauge</p> <hr/> <p>f. Compound gauge</p> <hr/>	<p>8. Igniter power source part</p> <hr/> <p>a. Ignition transformer</p> <hr/> <p>b. Secondary cable</p> <hr/>
	<p>9. Control panel part</p> <hr/> <p>a. Aux. relay</p> <hr/> <p>b. Transformer</p> <hr/> <p>c. Fuse</p> <hr/> <p>d. Main switch</p> <hr/> <p>e. Magnetic switch</p> <hr/> <p>f. Switching power supply</p> <hr/> <p>g. Sequencer/PLC</p> <hr/> <p>h. Timer</p> <hr/>

Contact VOLCANO (on Products, Parts and After-sales service)

Combustion Engineering Division
VOLCANO Co., Ltd.

info-m@volcano.co.jp
 FAX +81 6 6396 7609 TEL +81 6 6392 5541
<http://www.volcano.co.jp/>
 1-3-38, Nonaka-kita, Yodogawa-ku, Osaka
 532-0034 Japan